

PART # 1193

08-09 Challenger Cowl Hood

Notice: **Pre fit Before Painting!**
Painted or Altered Parts are Non-Refundable!

STEP 1: Remove the striker bar from the factory hood and install it with Locktite® to your new hood. The mounting holes in the striker bar are to big to just use the lock washers. Use the supplied washers with the lock washers to install the striker bar.

STEP 2: Adjust hood until proper alignment with matching panels is achieved.

STEP 3: Adjust primary latch until the latch bar fits into the latch. Make sure when the hood is closed you can hear the striker bar “click” into the latch.

WARNING: MAKE SURE THE SAFETY CATCH IS WORKING PROPERLY!



STEP 4: After you here it click, test it to be sure it's working properly by grabbing the front edge of the hood and slowly pulling upward with a steady even pressure. If the hood opens it's not adjusted properly; repeat STEP 3 until hood cannot be pulled open after it's closed.

STEP 5: To ensure the safety catch is working properly, close the hood, pull the hood release from inside the car and the hood will partially open. Slowly pull upward on the hood and jiggle it at the same time. If it opens without pulling the safety catch lever then the latch needs to be readjusted. The safety catch prevents the hood from opening in the event the primary latch fails.

STEP 6: Locate the hood stoppers  located on the radiator support. Adjust upward until they apply a small amount of pressure to the underside of the hood when it is closed. This will prevent the hood from shaking or rocking.

STEP 7: Install the squirts and squirter hose to the under side of the hood with the small phillips screws **as shown in fig.A**. Then, reroute the stock squirter hose **as shown in fig.B**.

STEP 8: If you have factory hood struts remove them and install the supplied gas struts. The Cervini hood is heavier than the stock hood and needs stronger shocks to keep the hood from falling.

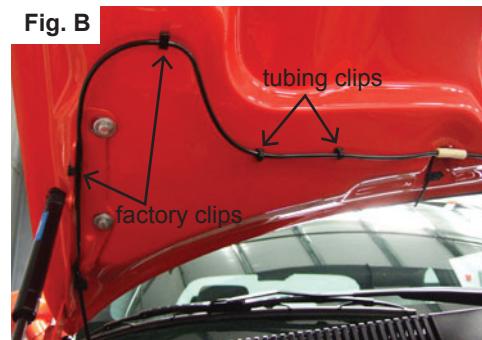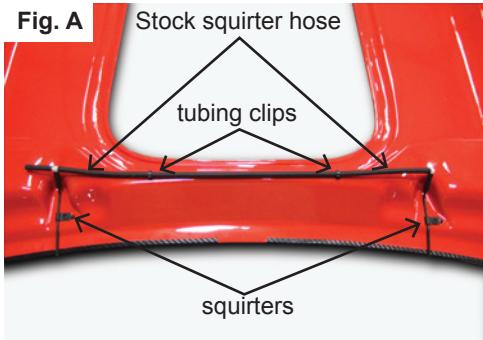

PART # 1193

QTY	DESCRIPTION	HARDWARE #
2	SMALL PHILIPS SCREWS	3265
4	TUBING CLIPS	WE2546
2	SQUIRTERS	BER001
2	GAS STRUTS-120 PSI	120 2009
2	GAS SHOCK FITTING	PS-3
2	WASHERS	33004

* use 7/8" washers in hinge locations part # 91090A107

